


What's best for you?

A guide to choosing the most suitable SterlingOSB Zero for your application

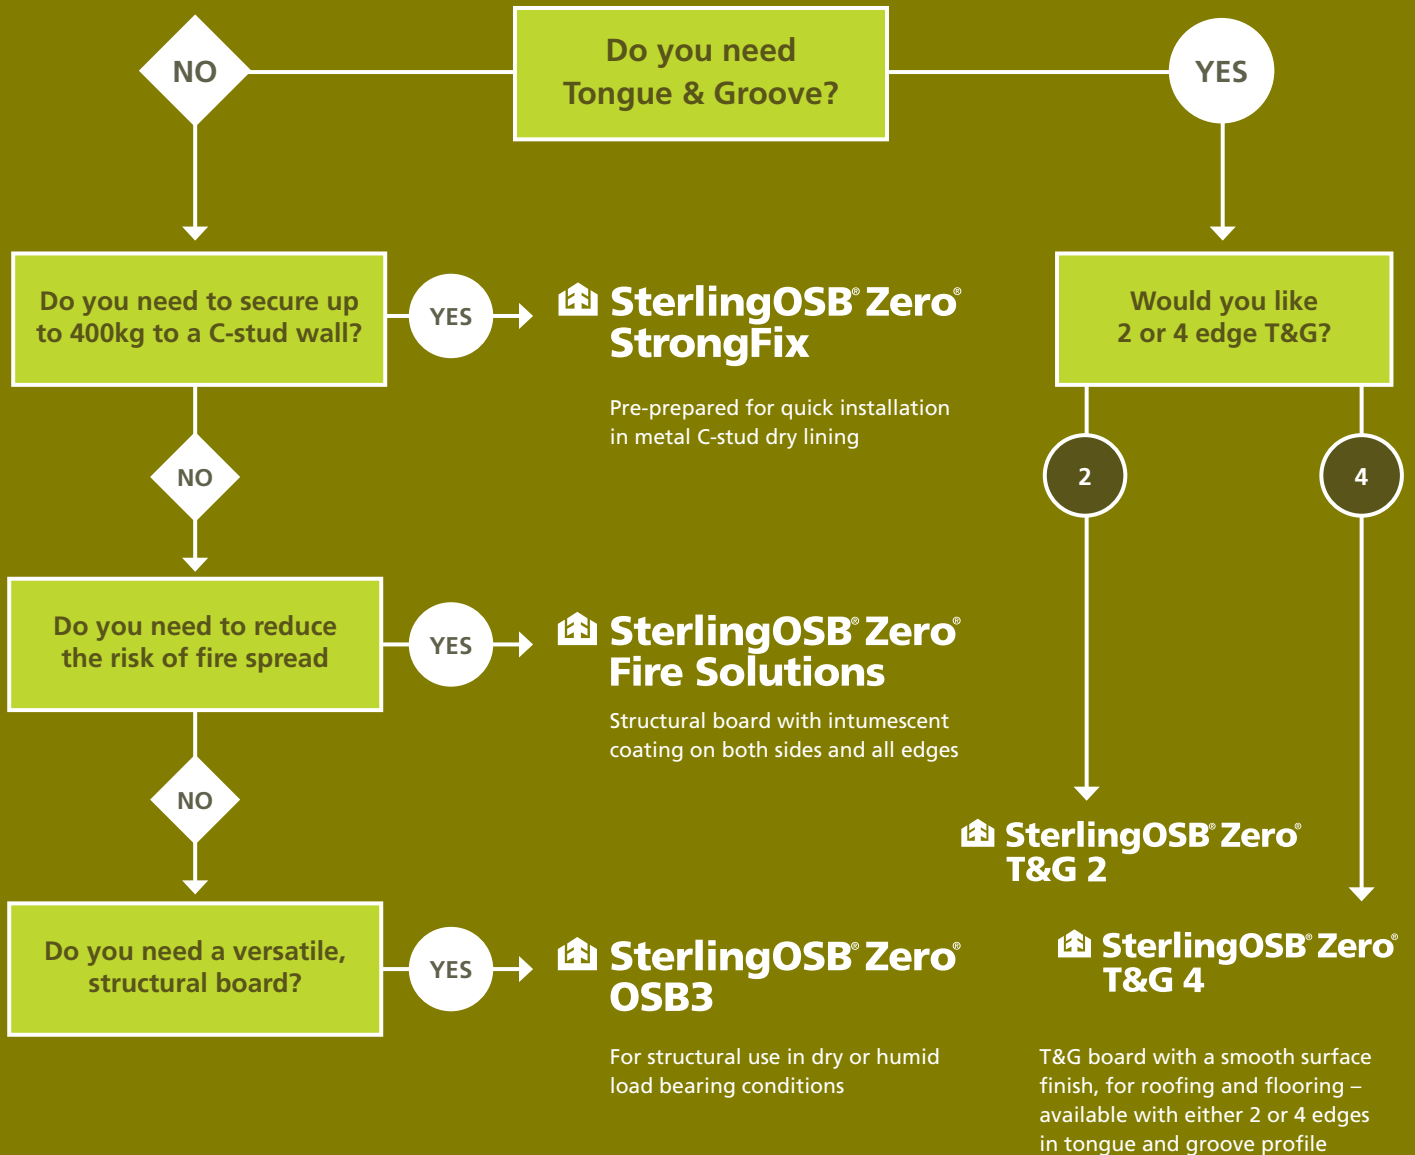

West Fraser

Formerly known as **Norbord**
Make it better




The mark of responsible forestry



What's best for you?

A guide to choosing the most suitable flooring system

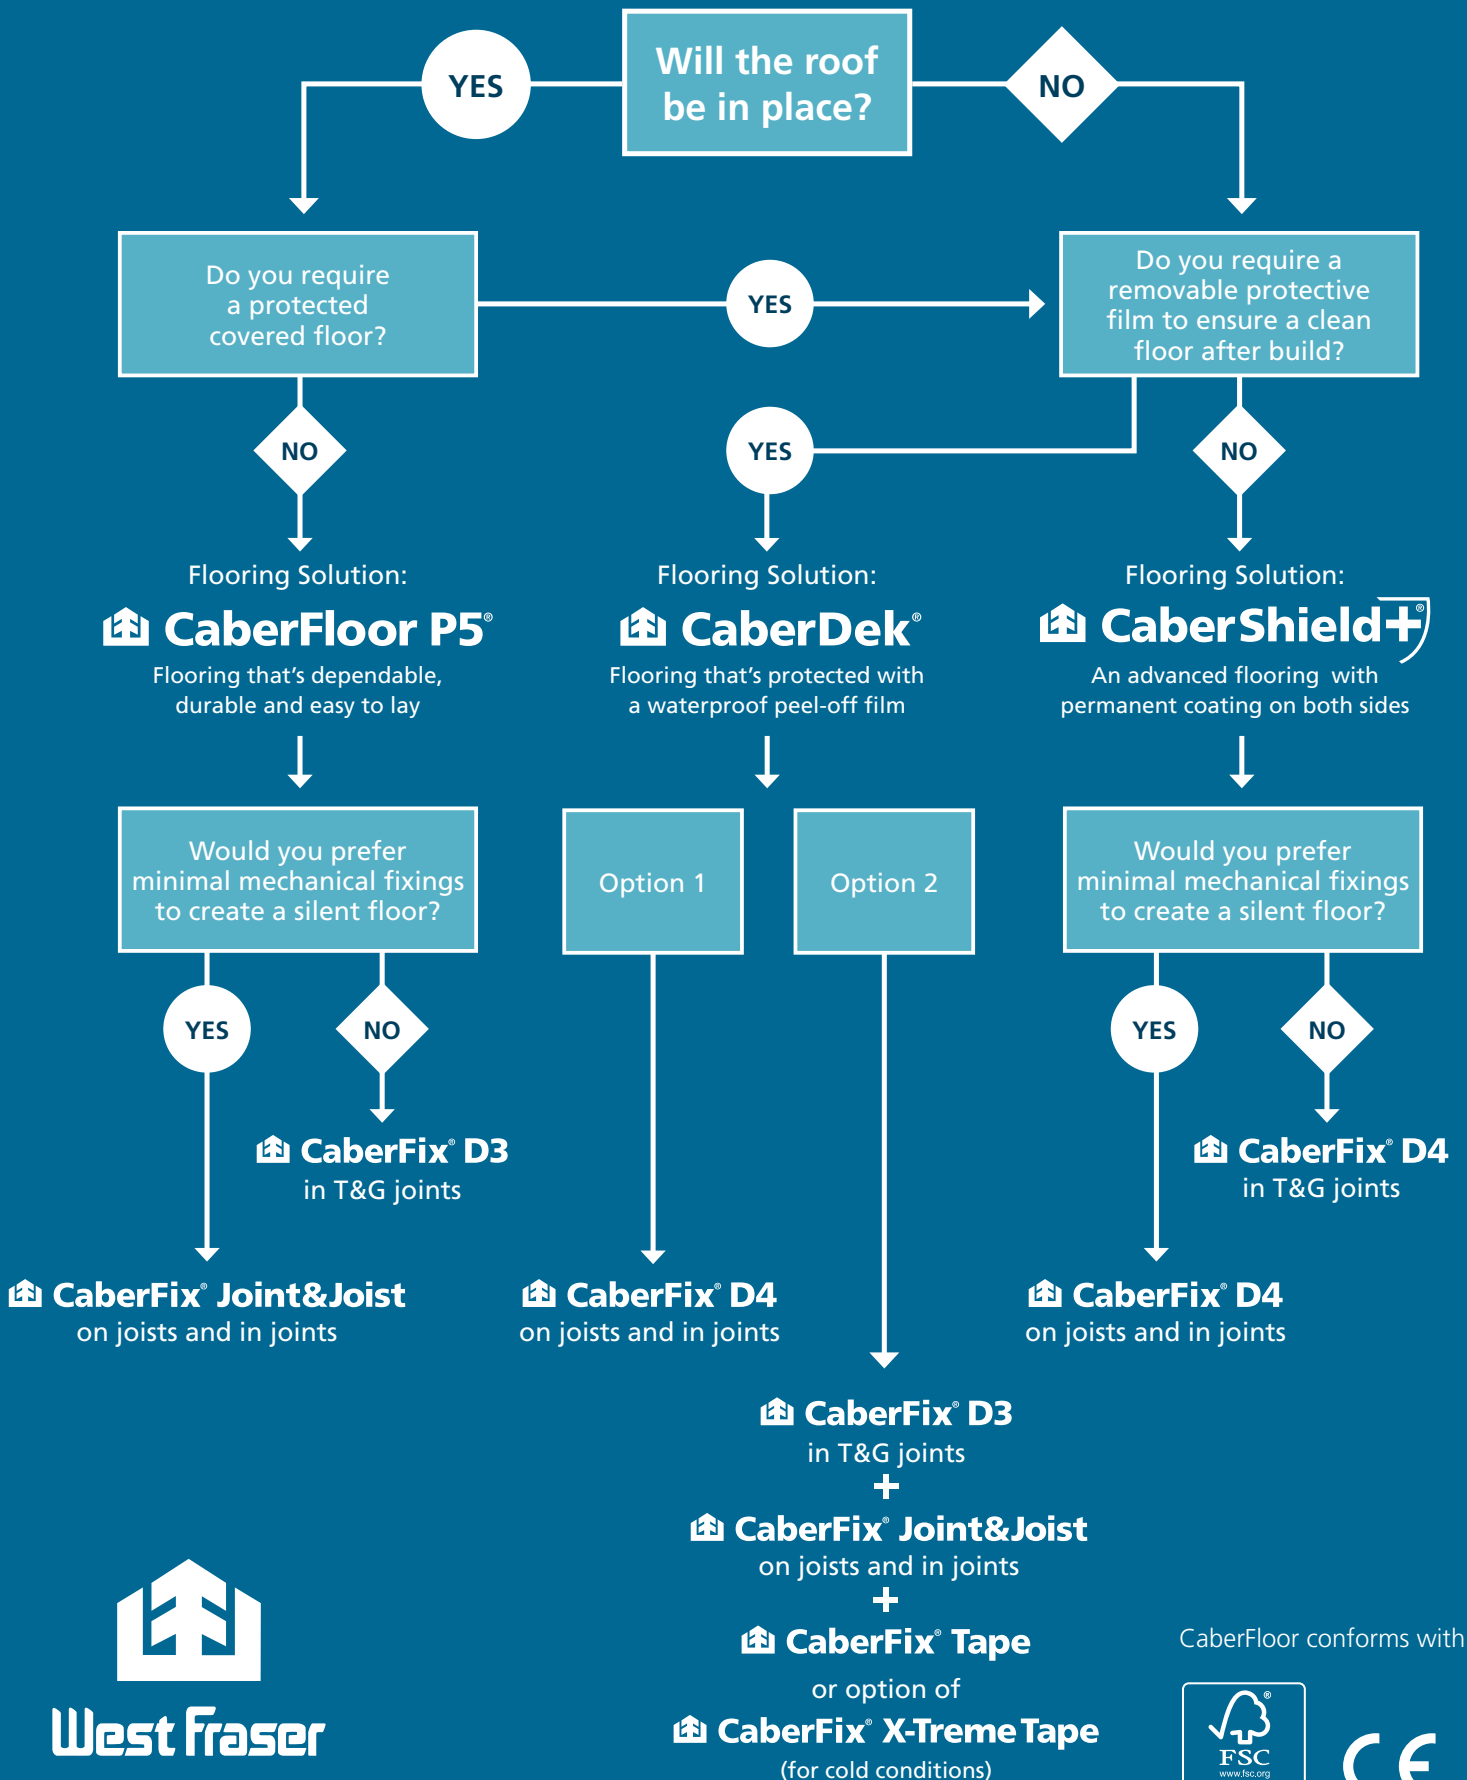

West Fraser

Formerly known as **Norbord**
Make it better

CaberFloor conforms with




The mark of responsible forestry



What's best for you?

A guide to choosing the most suitable CaberWood MDF for your application

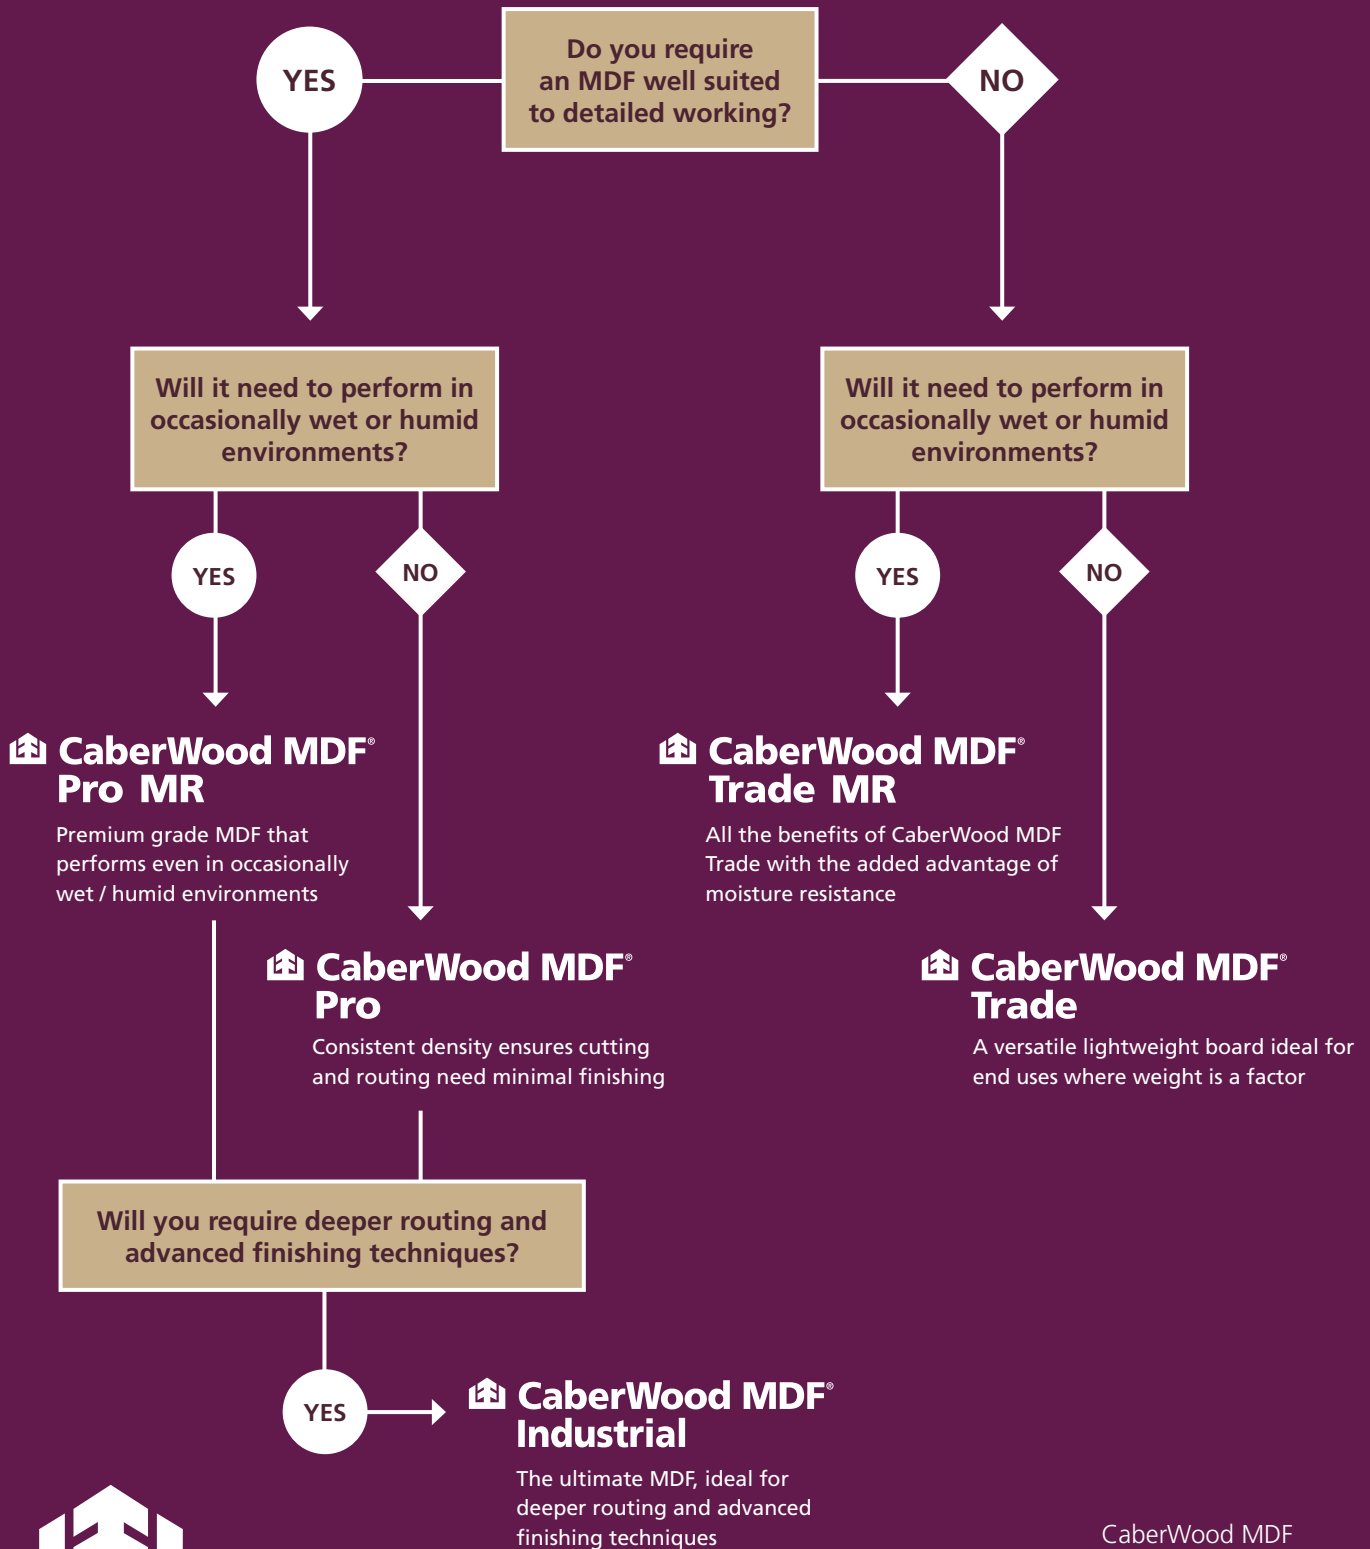

West Fraser

Formerly known as **Norbord**
 Make it better

CaberWood MDF conforms with



The mark of responsible forestry

