


What's best for you?

A guide to choosing the most suitable SterlingOSB Zero for your application

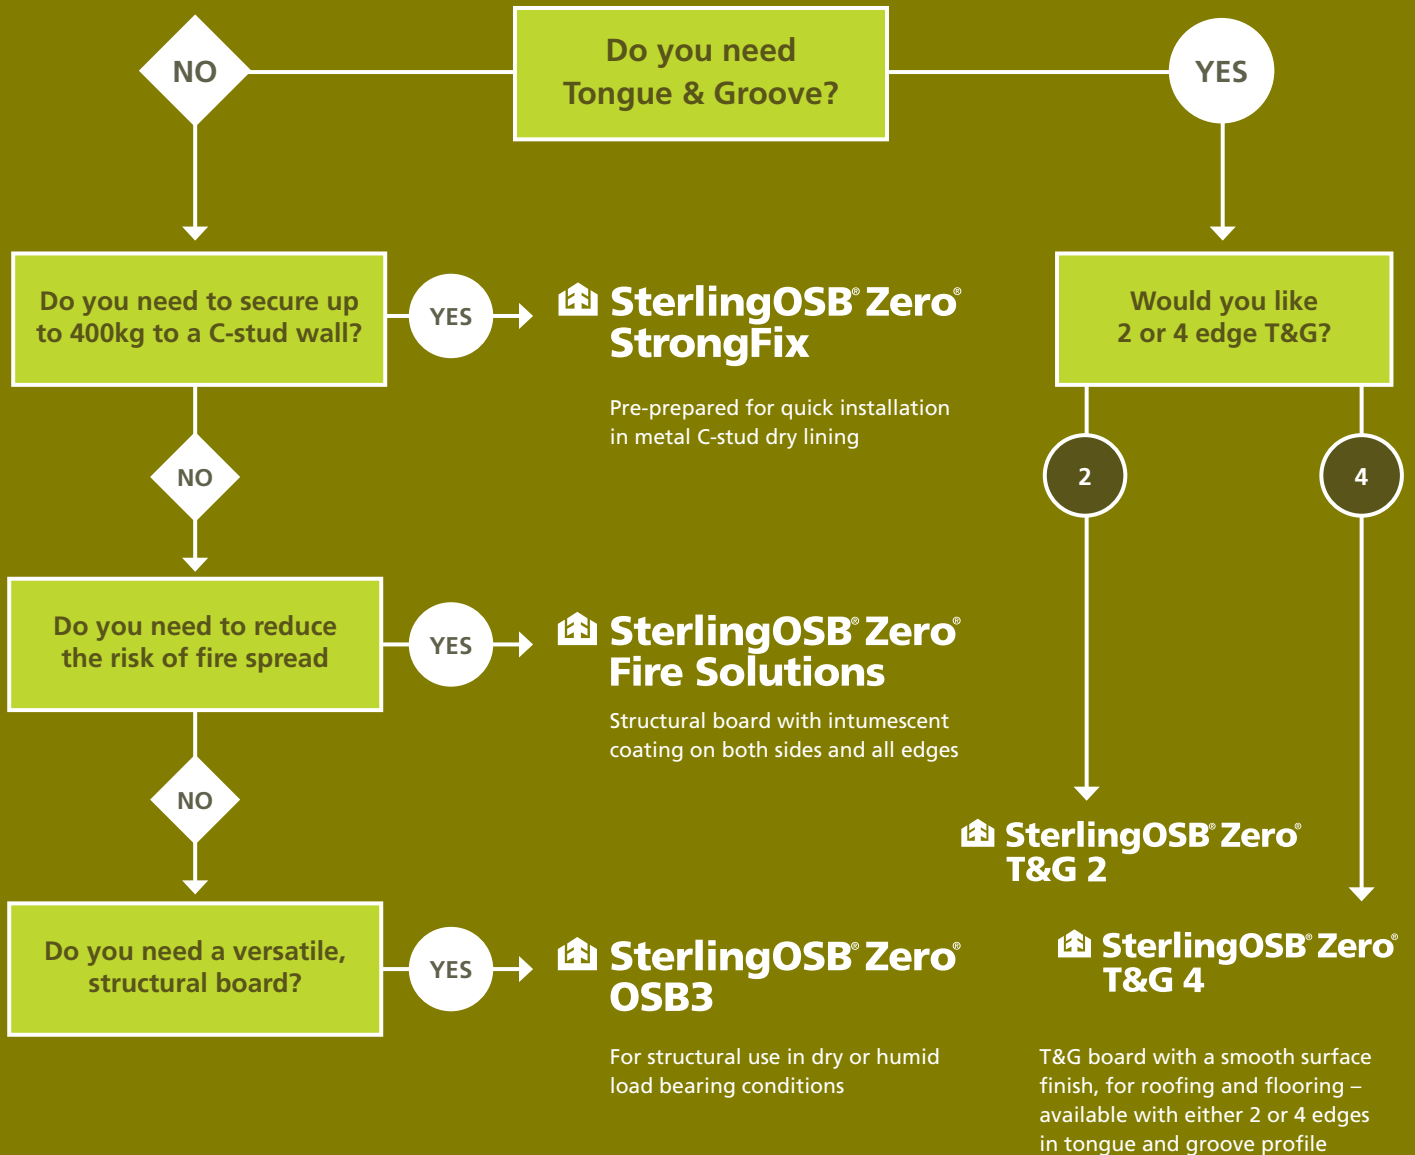

West Fraser

Formerly known as **Norbord**
Make it better



The mark of responsible forestry

